


Panel Descriptions

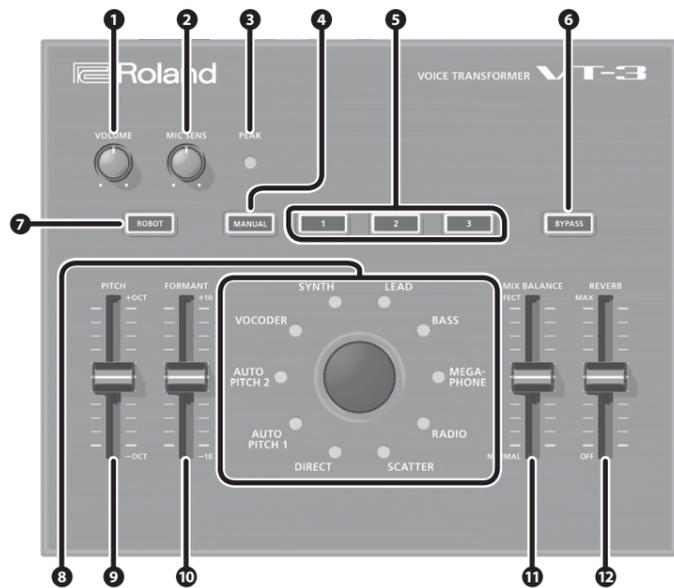


- 1 [VOLUME] knob**  
Adjusts the output volume of the OUT jacks and the PHONES jack.  
\* This does not affect the volume of USB audio.
- 2 [MIC SENS] knob**  
Adjusts the input sensitivity of the mic connected to the MIC IN jacks (front/rear).
- 3 PEAK indicator**  
Lights if the mic input level is excessive.  
Use the [MIC SENS] knob (2) to adjust the sensitivity so that this indicator lights occasionally. If it lights frequently, lower the sensitivity.
- 4 [MANUAL] button**  
If you turn this on to make the button light, the current settings of the sliders (9, 10, 11, 12) are applied to the sound.
- 5 Scene Memory buttons [1]–[3]**  
Instantly recall the settings (scenes) of the [ROBOT] button (7), character knob (8) and the sliders (9, 10, 11, 12).  
The scene memory button that you recall is lit. You can store up to three scenes.  
→ Refer to "Scene Memory"
- 6 [BYPASS] button**  
If you turn this on to make the button light, the effects (including reverb) will be bypassed.  
\* If you use the footswitch to bypass, reverb will still be applied.
- 7 [ROBOT] button**  
If you turn this on to make the button light, produces an expressionless robotic voice at a fixed pitch.  
→ Refer to "Adjusting the Voice"
- 8 Character knob**  
Selects the vocal character.  
The LED of the selected character is lit.  
→ Refer to "Adjusting the Voice"
- 9 [PITCH] slider**  
Adjusts the pitch of the voice.  
You can adjust this in a range of 1 octave up or down.
- 10 [FORMANT] slider**  
Adjusts the formant.  
Negative ("-") settings produce a masculine character; positive ("+") produce a feminine character.
- 11 [MIX BALANCE] slider**  
Adjusts the balance between the unprocessed voice (NORMAL) and the effect-processed voice (EFFECT).
- 12 [REVERB] slider**  
Adjusts the amount of reverb.

Connecting Your Equipment

\* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

- A PHONES jack (stereo miniature phone type)**  
Connect headphones (sold separately) here. This outputs the same sound as the OUT jacks (1, 2).
- B MIC IN jack (front) (miniature phone type)**  
Connect a mic that is compatible with plug-in power (sold separately).  
\* This is only for use with a mic that is compatible with plug-in power. Do not connect any other type of mic.

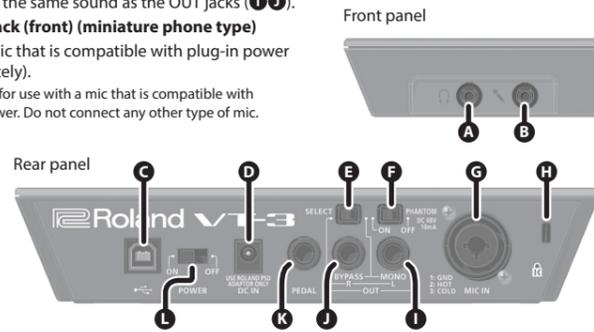

- C USB (-) port**  
Use a commercially available USB 2.0 cable to connect this to your computer.  
→ Refer to "USB Audio Interface"
- D DC IN jack**  
Connect the included AC adaptor here. Use only the supplied AC adaptor. Using any other adaptor may cause overheating and malfunctions.  
\* When connected via USB, power is supplied from the USB connection, so the AC adaptor does not need to be connected.
- E [SELECT] switch**  
Switches the audio that is output from the OUT jacks (1, 2).  

Switch	Explanation
R-L	Stereo audio will be output.
BYPASS-MONO	The unprocessed sound (BYPASS) and the processed sound (MONO) will be output separately.
- F [PHANTOM] switch**  
Turn this "ON" if you want phantom power to be supplied to the MIC IN jack (rear) (G).  
\* Phantom power is not supplied to the TRS phone plug.
- G MIC IN jack (rear) (1/4" TRS phone type/XLR type)**  
Connect a mic (sold separately) here. If a condenser mic is connected to the XLR connector, phantom power can be supplied.
- H Security slot (Ⓜ)**  
→ <http://www.kensington.com/>
- I, J OUT jacks**  
Connect these jacks to your amp or monitor speakers.  
If the [SELECT] switch (E) is set to "BYPASS-MONO," the unprocessed sound (BYPASS) and the processed sound (MONO) will be output separately.
- K PEDAL jack**  
Connect a footswitch (sold separately). The footswitch can turn BYPASS on/off.  
\* If you bypass using the footswitch, reverb will still be applied.

- L [POWER] switch**  
Turn the power of the VT-3 on/off.  
\* After you've made connections correctly, be sure to **turn on the power in the order of the VT-3 first, and then the connected system.** Powering-on in the incorrect order may cause malfunctions or damage. When turning the power off, **power-off the connected system first, and then the VT-3.**  
\* This unit is equipped with a protection circuit. A brief interval (a few seconds) after turning the unit on is required before it will operate normally.  
\* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

Turning the Power On/Off

- L [POWER] switch**  
Turn the power of the VT-3 on/off.  
\* After you've made connections correctly, be sure to **turn on the power in the order of the VT-3 first, and then the connected system.** Powering-on in the incorrect order may cause malfunctions or damage. When turning the power off, **power-off the connected system first, and then the VT-3.**  
\* This unit is equipped with a protection circuit. A brief interval (a few seconds) after turning the unit on is required before it will operate normally.  
\* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

- MIX BALANCE slider**  
Adjusts the balance between the unprocessed voice (NORMAL) and the effect-processed voice (EFFECT).
- REVERB slider**  
Adjusts the amount of reverb.

\* This instrument is equipped with balanced (XLR/TRS) type jacks. Wiring diagrams for these jacks are shown below. Make connections after first checking the wiring diagrams of other equipment you intend to connect.



Modifying Your Voice

Here's how to apply an effect that modifies your voice.

1. **Connect your mic to the MIC IN jack (front or rear).**  
If you've connected a condenser mic to the XLR connector of the MIC IN jack (rear), turn the [PHANTOM] switch on.
2. **Turn the [BYPASS] button on.**
3. **While vocalizing into the mic, adjust the input sensitivity with the [MIC SENS] knob.**  
Adjust this so that the PEAK indicator lights occasionally.
4. **Press one of the scene memory buttons [1]–[3].**
5. **Turn the [BYPASS] button off.**
6. **Vocalize into the mic.**  
The effect-processed voice will be output.

MEMO

- Adjust the input sensitivity accurately. The effect will not work correctly if the mic input level is too low or too high.
- When vocalizing into the mic, the voice of only one person should be input. The effect will not work correctly if multiple voices are being input.
- Make sure that the sound from the speaker does not enter the mic.

- \* Acoustic feedback could be produced depending on the location of microphones relative to speakers. This can be remedied by:
  - Changing the orientation of the microphone(s).
  - Relocating microphone(s) at a greater distance from speakers.
  - Lowering volume levels with the [VOLUME] knob.

Adjusting the Voice

Here's how to use the character knob and the sliders to adjust the voice.

1. **Press the [MANUAL] button.**  
Alternatively, you can press a scene memory button and make adjustments to that saved scene.
2. **Use the character knob to select the character you want.**  
You can choose a character from the following list.
3. **Choose [ROBOT] button on or off.**  
If you turn this on, produces an expressionless robotic voice at a fixed pitch.
4. **Use the sliders to adjust settings such as PITCH and FORMANT.**

Character	Explanation
DIRECT	Turns off the character effect.
AUTO PITCH 1	A pitch-corrected voice.
AUTO PITCH 2	An electronic pitch-corrected voice.
VOCODER	A classic vocoder voice.
SYNTH	The pitch of the input voice is detected and used to play a synth sound.
LEAD	The pitch of the input voice is detected and used to play a synth sound.
BASS	The pitch of the input voice is detected and used to play a bass sound.
MEGAPHONE	Produces a distorted voice as when using a megaphone.
RADIO	Produces a voice as heard from the radio.
SCATTER	Repeats the input voice at effective intervals.

Scene Memory

Recalling

1. **Press the scene memory button [1]–[3] that you want to recall.**  
The button lights, and the [ROBOT] button, character knob and slider settings (the scene) are recalled instantly.  
\* When you recall a scene, the current positions of the sliders will not match the actual sound.  
\* If you operate the sliders after recalling a scene, the slider settings will be reflected in the sound. In this case, the scene memory button will blink.

Saving

Here's how to save the settings of the [ROBOT] button, the character knob and the sliders to a scene memory button [1]–[3].

1. **Press and hold the scene memory button [1]–[3] in which you want to save the settings.**  
When all of the scene memory buttons [1]–[3] blink, the settings have been saved.

Copying

Here's how to copy a scene to another number.

1. **Press the scene memory button that you want to copy; it is recalled.**
2. **Press and hold the copy-destination scene memory button.**  
When all of the scene memory buttons [1]–[3] blink, the copy has been completed.


USB Audio Interface

By using a commercially available USB 2.0 cable to connect the VT-3 to your computer, you can use the VT-3 as a USB audio interface.

- \* **You must install the USB driver before connecting the VT-3 to your computer.**  
Download the USB driver from the Roland website.  
For details, refer to Readme.htm which is included in the download.  
→ <http://www.roland.com/support/>


Playback

You can use the VT-3 to listen to the sound that's played by your computer. The sound will be output from the VT-3's OUT jacks and from the PHONES jack.

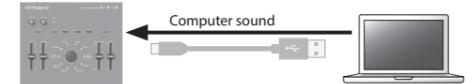


Recording

The mic sound processed by the VT-3 can be recorded on your computer. The VT-3 will output the effect-processed sound and the unprocessed sound (bypass).

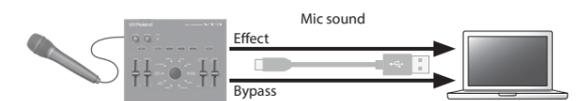

Loop-back

The sound that's played by your computer can be mixed on the VT-3 with the mic sound and sent back to the computer.

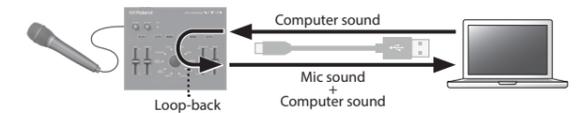

- \* You can also change the settings so that loop-back will not occur.  
→ Refer to "Various Settings"

Various Settings

Restoring the Factory Settings (Factory Reset)

Here's how to return the VT-3 to its factory-set state.

1. **While holding down the [BYPASS] button, turn on the power.**  
The [MANUAL] button blinks.  
If you decide to cancel the factory reset, turn off the power.
2. **Press the [MANUAL] button to execute the factory reset.**
3. **When all buttons are lit, turn the VT-3's power off, then on again.**

Loop-Back and Footswitch Settings

1. **While holding down the [MANUAL] button, turn on the power.**  
All of the character knob LEDs are lit, and the [BYPASS] button is blinking.  
If you decide not to change the settings, turn off the power.
2. **Use scene memory buttons [1], [2], and [3] and the [ROBOT] button to make settings.**

Parameter	Button	Explanation	
USB audio loop-back	[1]	Lit (on)	The sound played back by your computer is mixed on the VT-3 with the sound of the mic, and returned to the computer. The sound is also output from the VT-3's OUT jacks and PHONES jack. (default)
		Unlit (off)	The sound played back by your computer is output from the VT-3's OUT jacks and PHONES jack.
Footswitch polarity	[2]	Lit (normal)	Normally you'll leave this "lit" (default)
		Unlit (inverse)	If the footswitch polarity is reversed, choose the "unlit" setting.
Footswitch type	[3]	Lit (latch)	Choose the "lit" setting if you've connected a latch-type footswitch (BOSS FS-5L). (default)
		Unlit (unlatch)	Choose the "unlit" setting if you've connected an unlatch-type footswitch (BOSS FS-5U, Roland DP-2).
BYPASS button function	ROBOT	Lit (mute)	Press the [BYPASS] button to mute.
		Unlit (bypass)	Press the [BYPASS] button to disable the effect.

3. **Press the [BYPASS] button to save the settings.**  
The settings are saved, and the VT-3 restarts.

Main Specifications Roland VT-3: VOICE TRANSFORMER

Power Supply	AC adaptor, or obtained via USB port (USB bus power)		
Current Draw	380mA		
Dimensions	210 (W) x 175 (D) x 57 (H) mm	8-5/16 (W) x 6-15/16 (D) x 2-1/4 (H) inches	
Weight	690g	1 lbs 9 oz	
Accessories	AC adaptor, Owner's manual, Leaflet "USING THE UNIT SAFELY"		
Options (sold separately)	Footswitch: BOSS FS-5L, FS-5U Pedal Switch: DP-2		

\* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.