



# WERKSTATT-01

## Exploration Patchbook

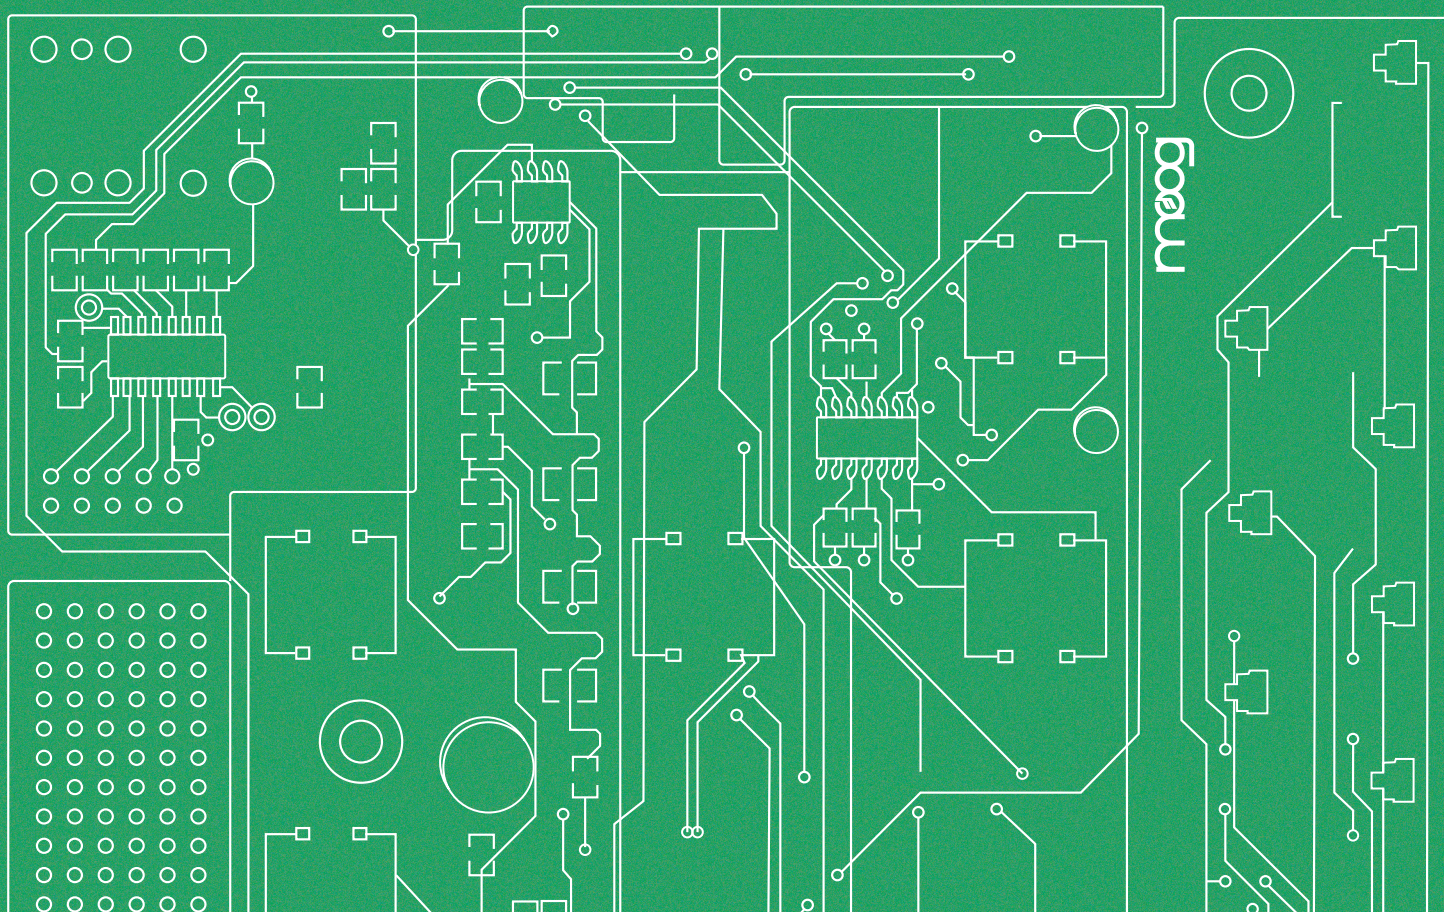

# LIFTOFF BASS

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

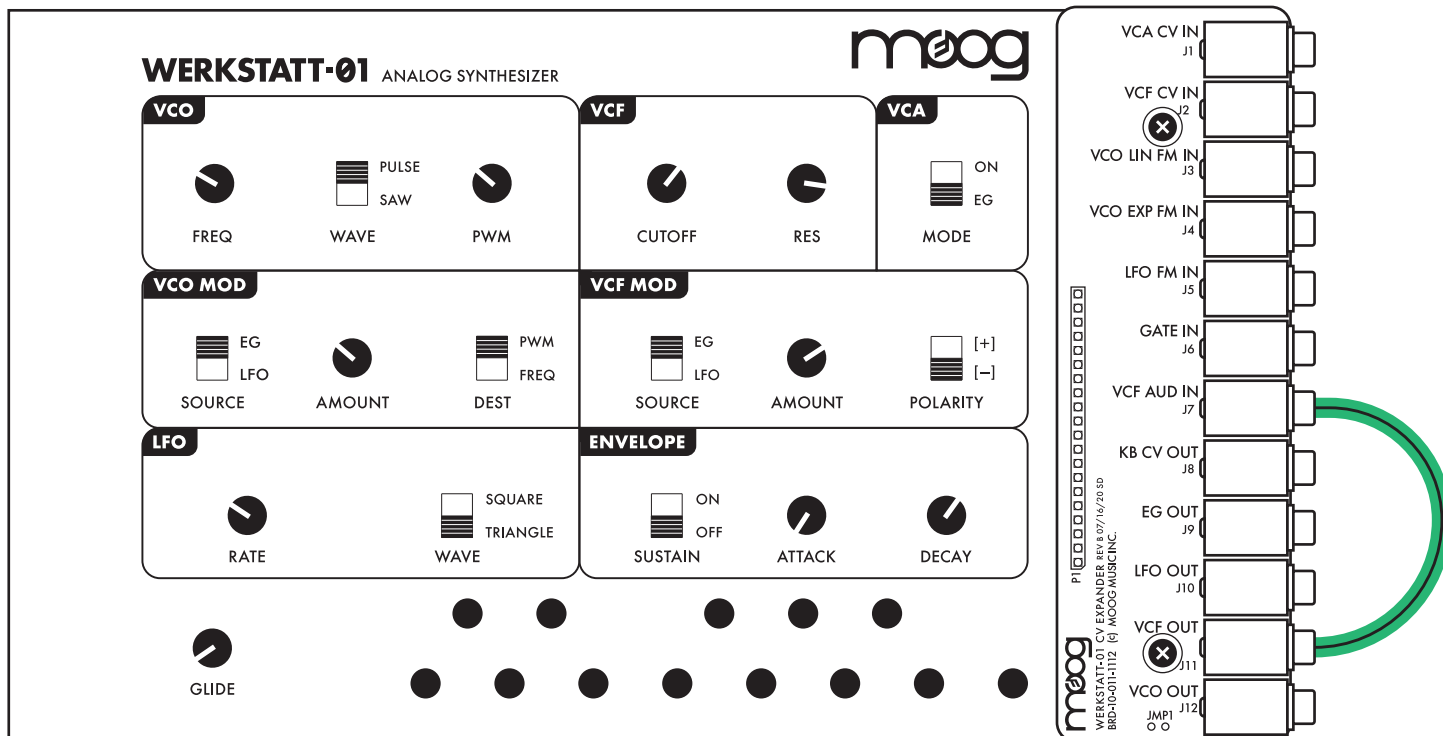


## NOTES:

Use the **VCO FREQ** knob to tune the keyboard down low to play in a bass register.  
Lower the **VCF RES** knob for a more buzzy timbre.



# WEST COAST LEAD


MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

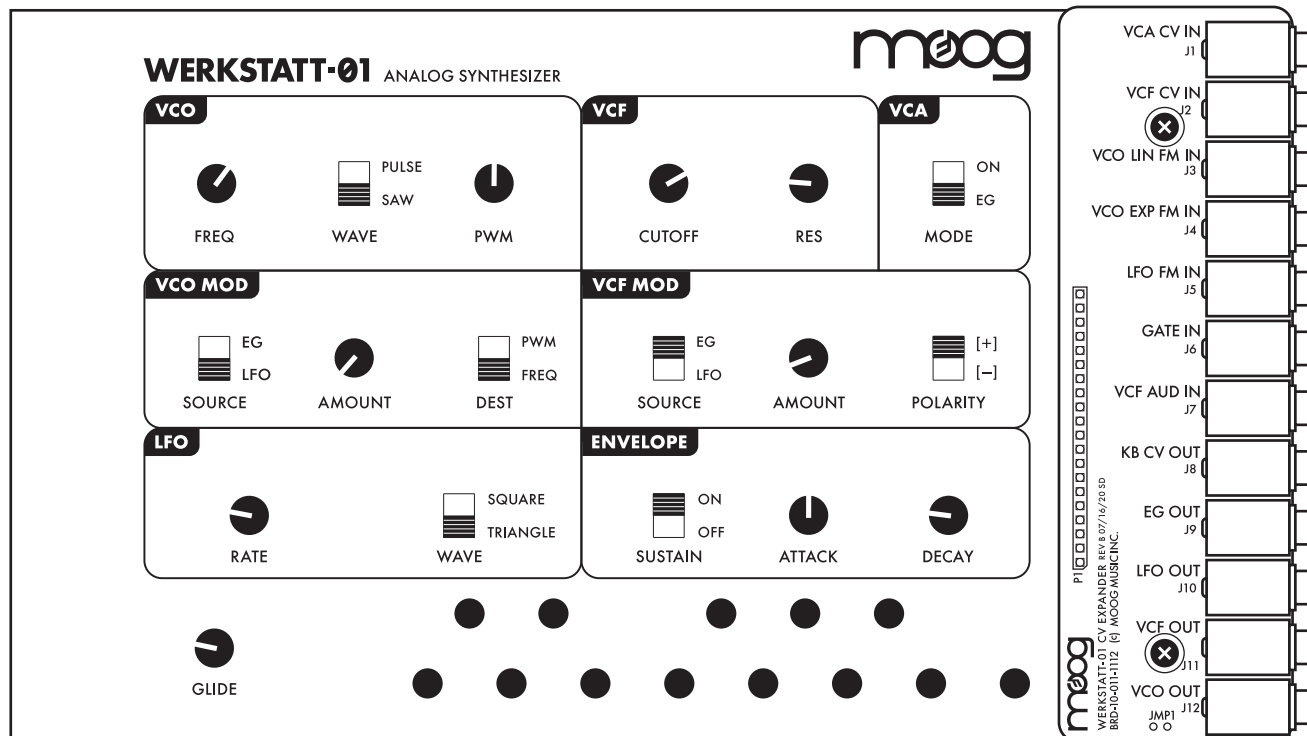

## NOTES:

Use the **VCO FREQ** knob to tune the keyboard higher to play in a lead register.

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

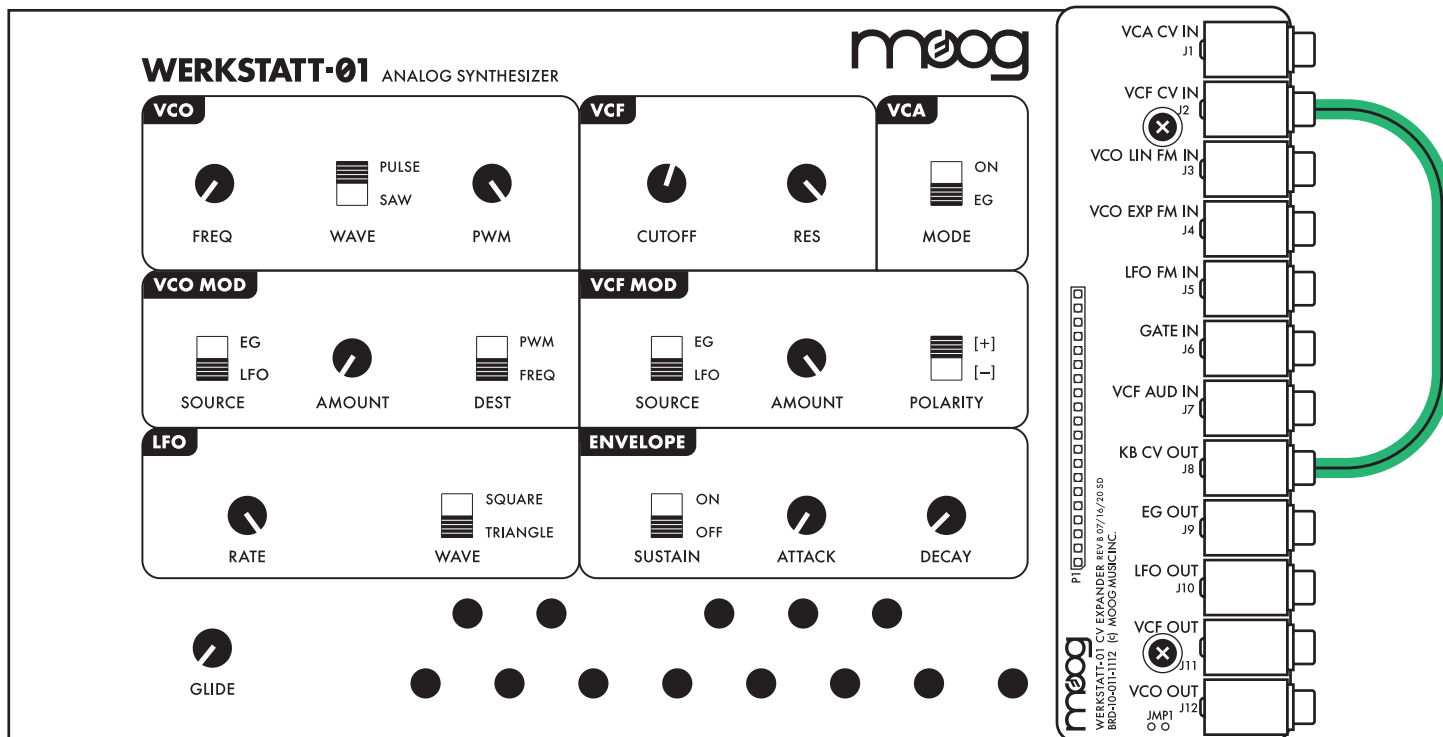

## NOTES:

The VCF is the sound source in this patch.

Adjust the **ENVELOPE DECAY** knob to go from closed to open hi-hat.


Adjust the relationship between **LFO RATE** and **VCF CUTOFF** knobs to alter the timbre of your hi-hat.

Turn the **VCF MOD AMOUNT** all the way down to turn your hi-hat into a clave.



# ACID SQUARE

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

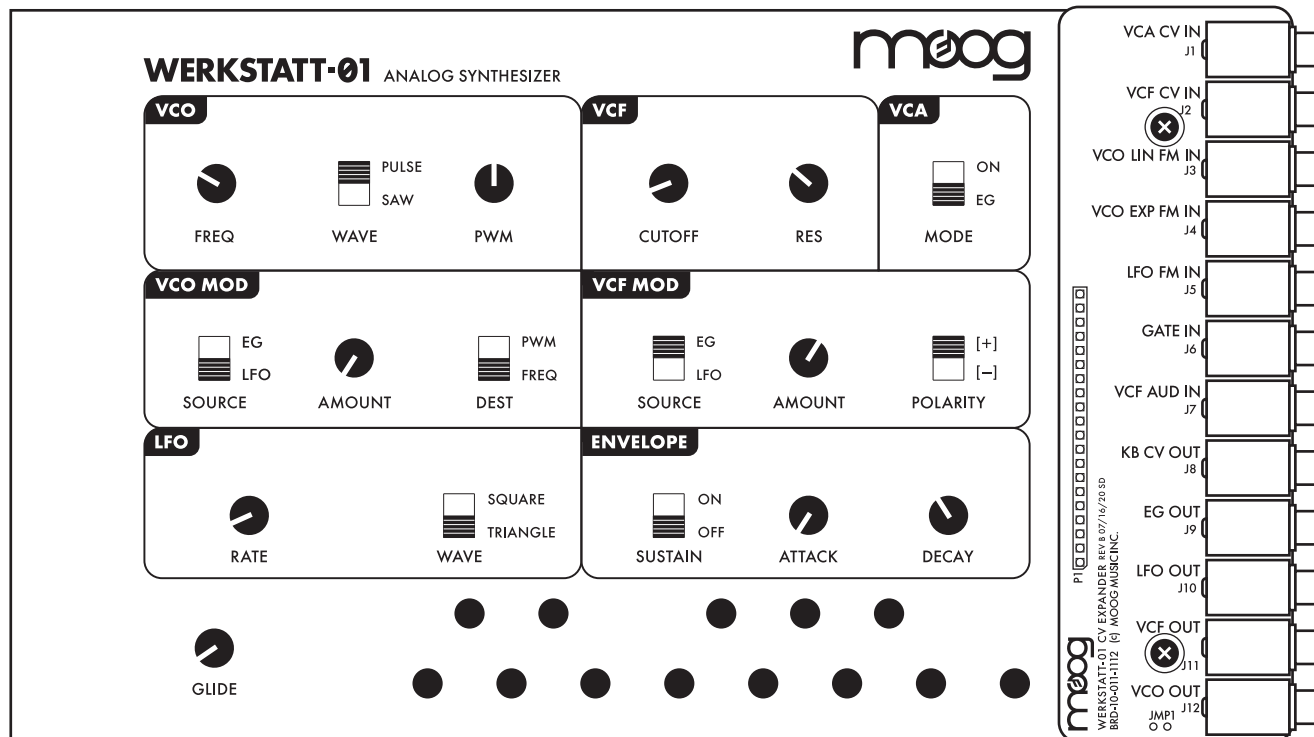


## NOTES:

Use the **VCO FREQ** knob to tune the keyboard down low to play in a bass register.

# DISCO TOM

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

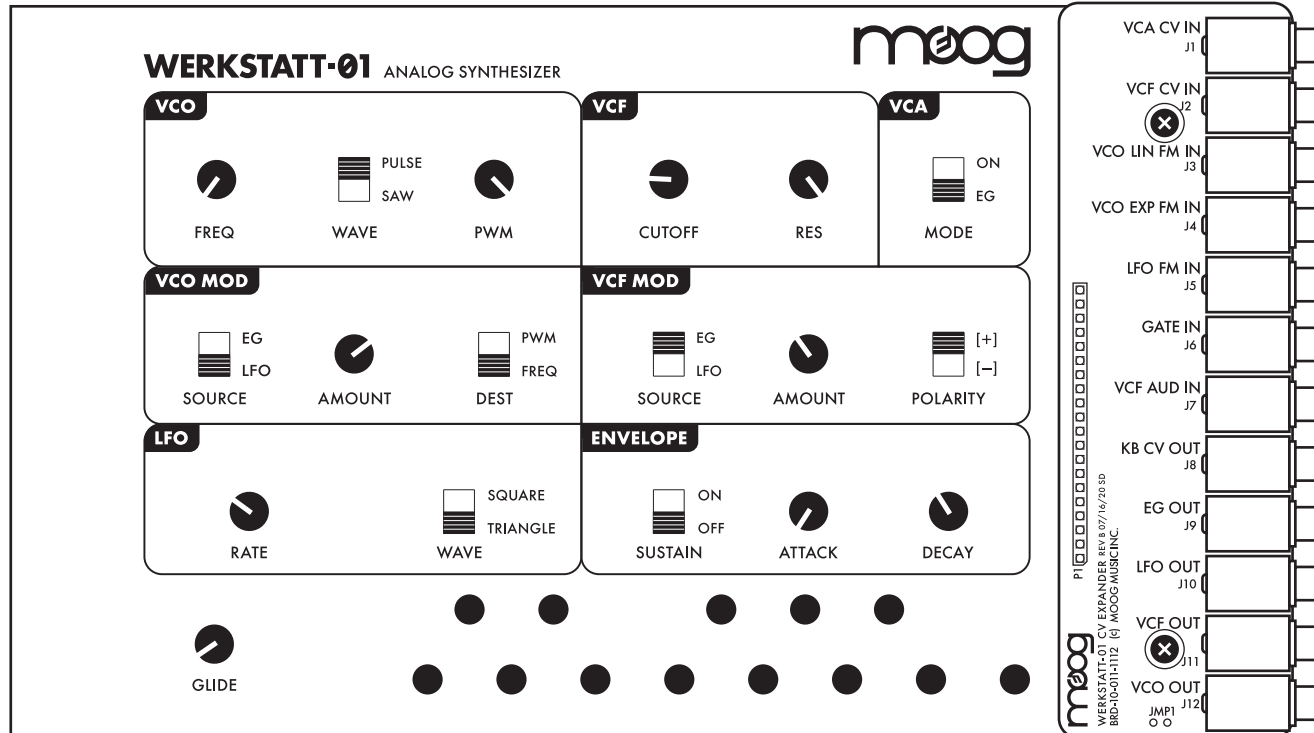


## NOTES:

The VCF is the sound source in this patch, so the **VCF CUTOFF** knob should be used for tuning.

# DEEP KICK

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

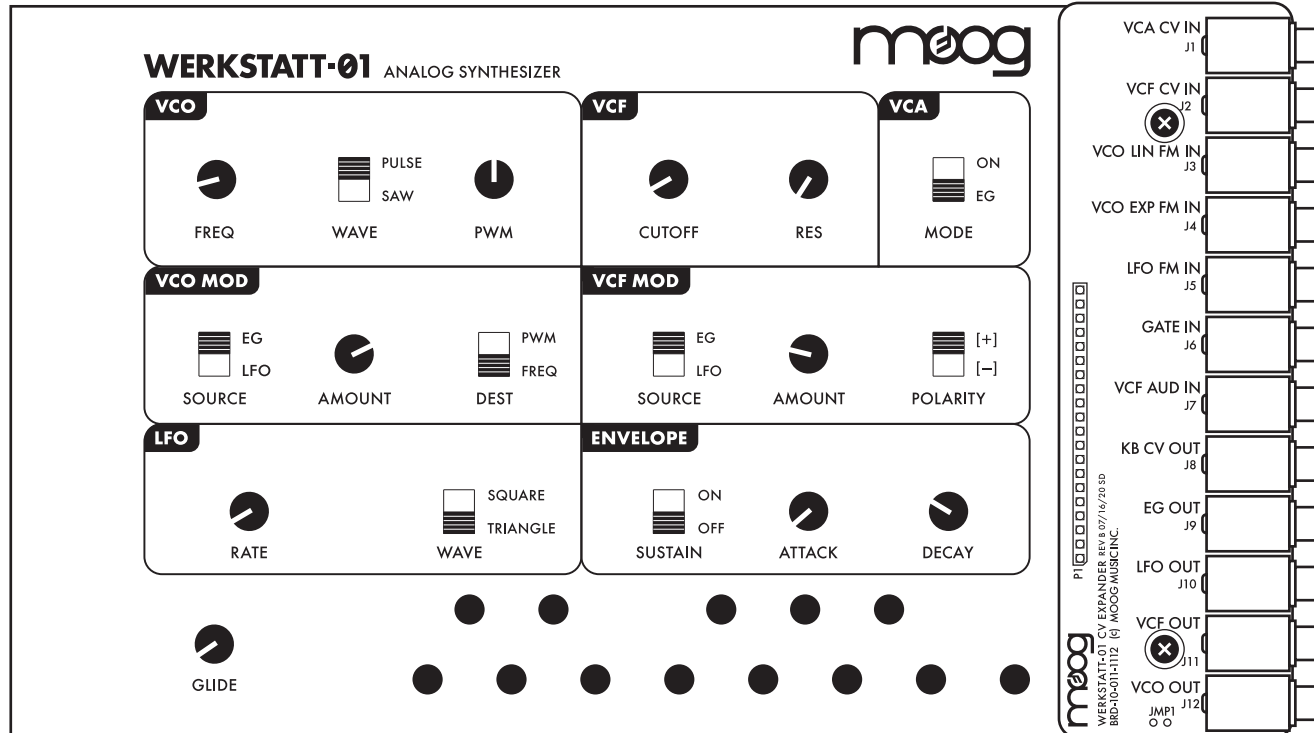


## NOTES:

Use the **VCO FREQ** knob to tune the keyboard down low to play in a bass register.



# FAUX FOLDER

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

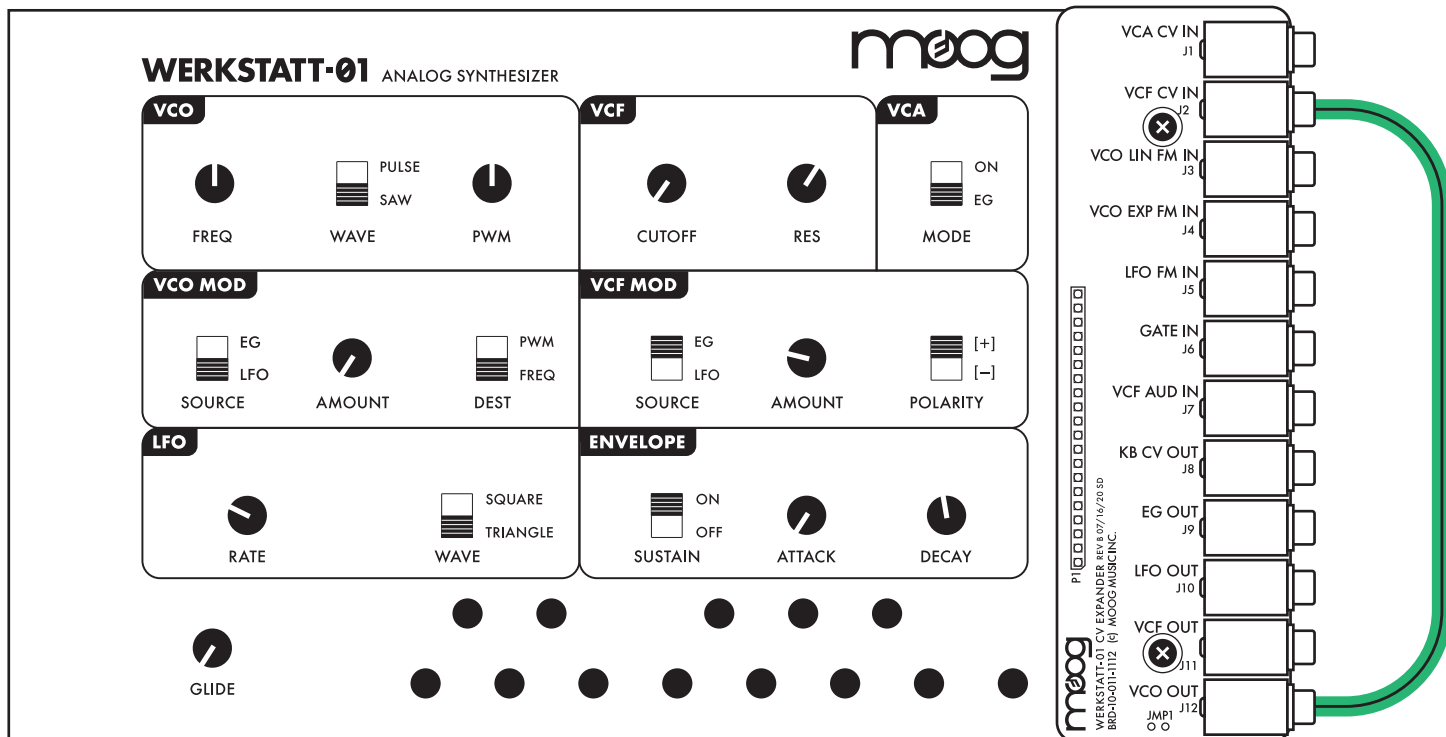


## NOTES:

Adjust the **VCF MOD AMOUNT** knob to increase the level of “folding.”

Turn up the **VCO MOD AMOUNT** knob to add vibrato.

# LASER ZAP

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

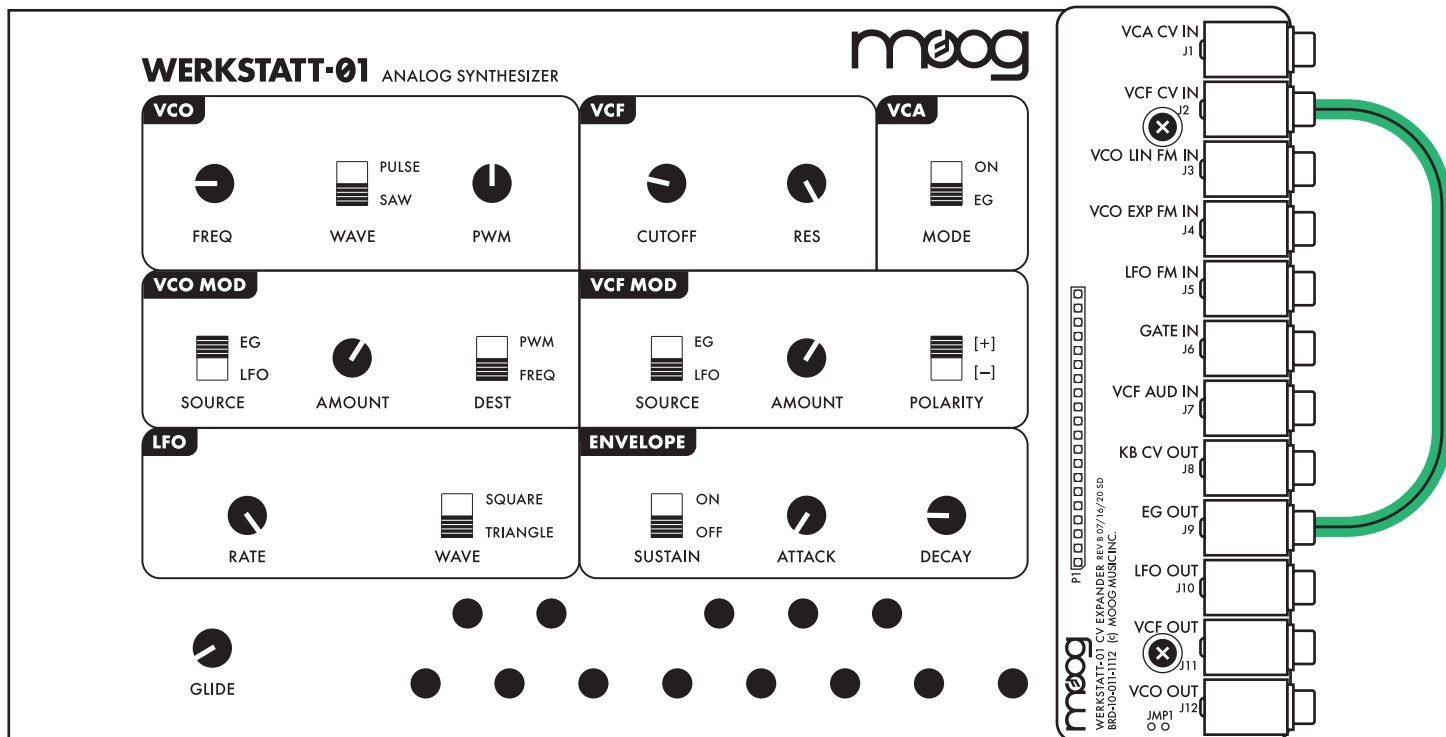


## NOTES:

Adjust the **ENVELOPE DECAY** knob to go from laser pistol to laser cannon!

# PICK UP THE PHONE

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

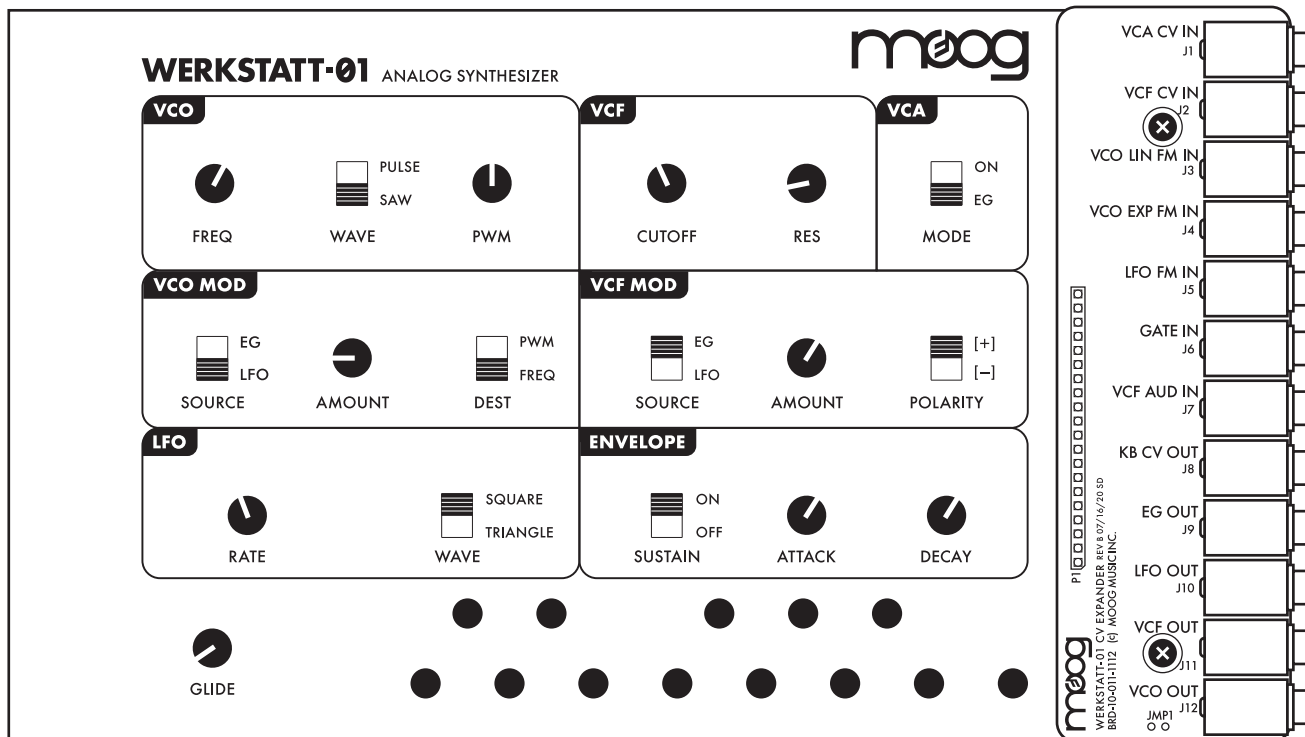


## NOTES:

Adjust **VCO MOD AMOUNT** to control the depth of “ringing.”



# UNSTEADY BASS

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

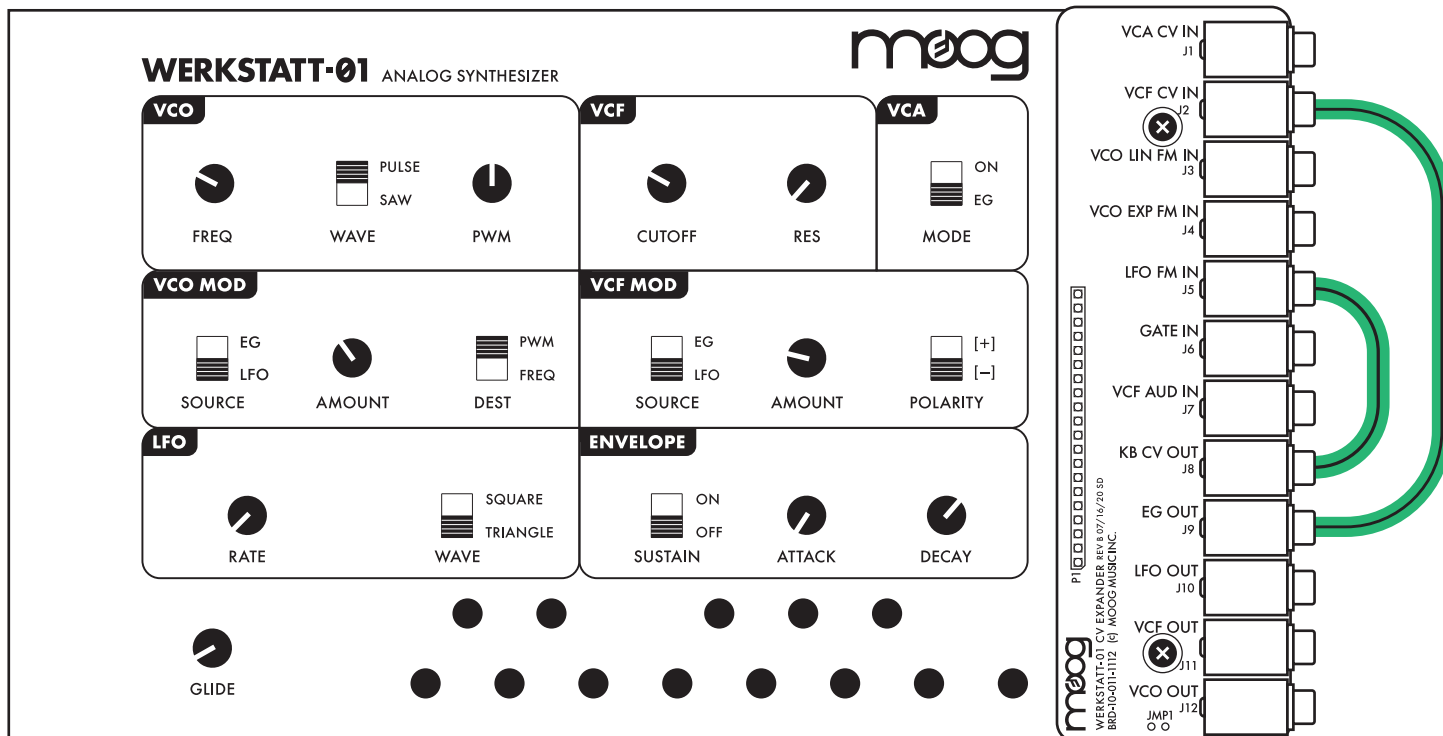


## NOTES:

Use the **VCO FREQ** knob to tune the keyboard down low to play in a bass register.

Try turning up the **VCF MOD AMOUNT** for a more dramatic wobble.

# VIBRATO LEAD

MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

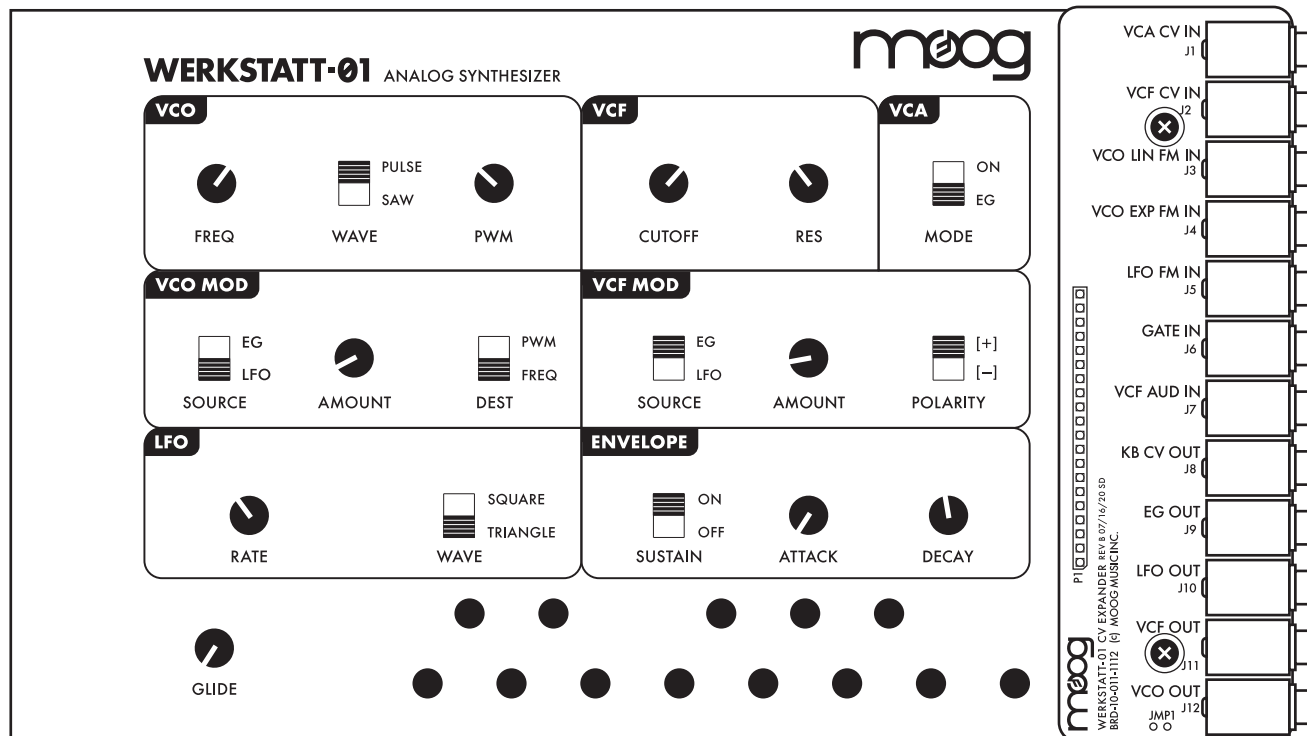


## NOTES:

Use the **VCO FREQ** knob to tune the keyboard higher to play in a lead register.  
Adjust **VCO MOD AMOUNT** knob to taste for vibrato depth.

# WHO NEEDS A DISTORTION PEDAL ANYWAYS?


MATCH ALL KNOBS, SWITCHES, AND PATCH LOCATIONS TO THE GRAPHIC BELOW

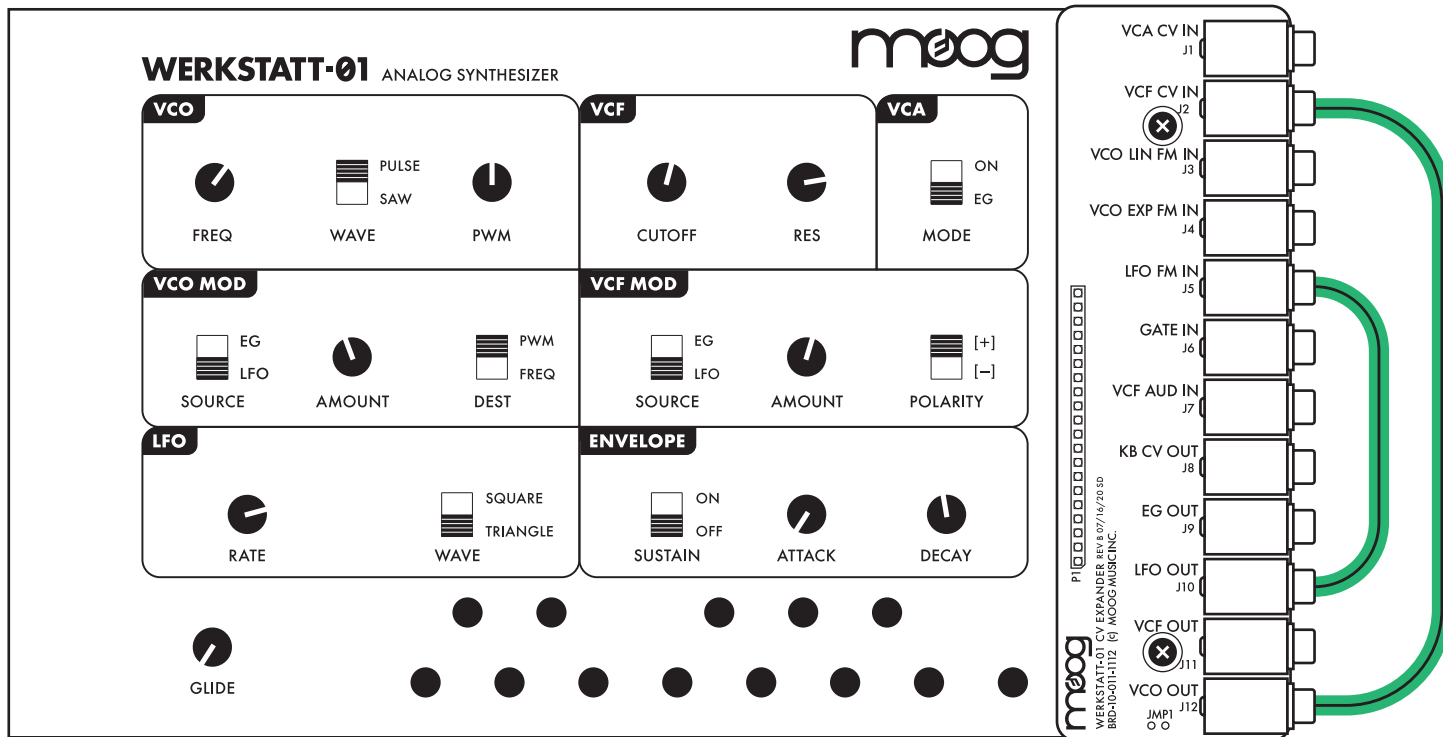

## NOTES:

Adjust the **VCO MOD AMOUNT** and **VCF MOD AMOUNT** to alter the timbre of distortion.





Your Werkstatt-01 is an instrument of exploration  
and can be expanded to satisfy your wildest  
creative visions. To discover more ways to get the  
most out of your Werkstatt-01 visit:

**[MOOGMUSIC.COM/WERKSTATT](https://moogmusic.com/werkstatt)**