

Quick Start Guide

TC ELECTRONIC FLASHBACK MINI DELAY

Delay - Controls the delay time.

Feedback - Sets the desired number of delay repeats.

Output

Footswitch - Turns the effect on and off. Hold down the footswitch and strum to set delay tempo.

USB - Connect to your computer for firmware updates and TonePrint editing.

Power - Connect a 9V / >100 mA power supply.

FX Level - Controls the level of the delay repeats.

Input



Visit tcelectronic.com to download the full manual

tc electronic