

8. CHK, CHV

CHK 2

50/60 Hz, Models A, B, C, D, E

Metal terminal box

Models		All
Pos.	Kit No	405179
Description		
164a	Terminal box with gasket	1
164	Terminal box cover with gasket	1
166	Screw	4
175	Screw	4
176	Terminal complete	1


Shaft seal

Kit No		435031	445068
Pos.	Description	CVBV	AUUV
37	Gasket Ø110/103 x 0.25	1	1
62	Stop ring	1	1
105	Shaft seal	1	1

Wear parts

Pump type		CHK 2-30/3-1	CHK 2-50/5-1
		CHK 2-40/4-1	CHK 2-60/6-1
			CHK 2-90/6-1
			CHK 2-100/6-1
			CHK 2-110/6-1
Pos.	Kit No	435032	435033
Description			
4a	Bearing chamber	-	1
36	Nut	3	3
37	Gasket	1	1
45	Neck ring	4	5
47a	Bearing ring	-	1
62	Stop ring	1	1
65	Neck ring retainer	4	5
66	Washer	1	1
66a	Washer	3	3
67	Lock nut	1	1
69a	Spacing pipe 7.8 mm	1	1
122	Priming screw	1	1

CHK 2

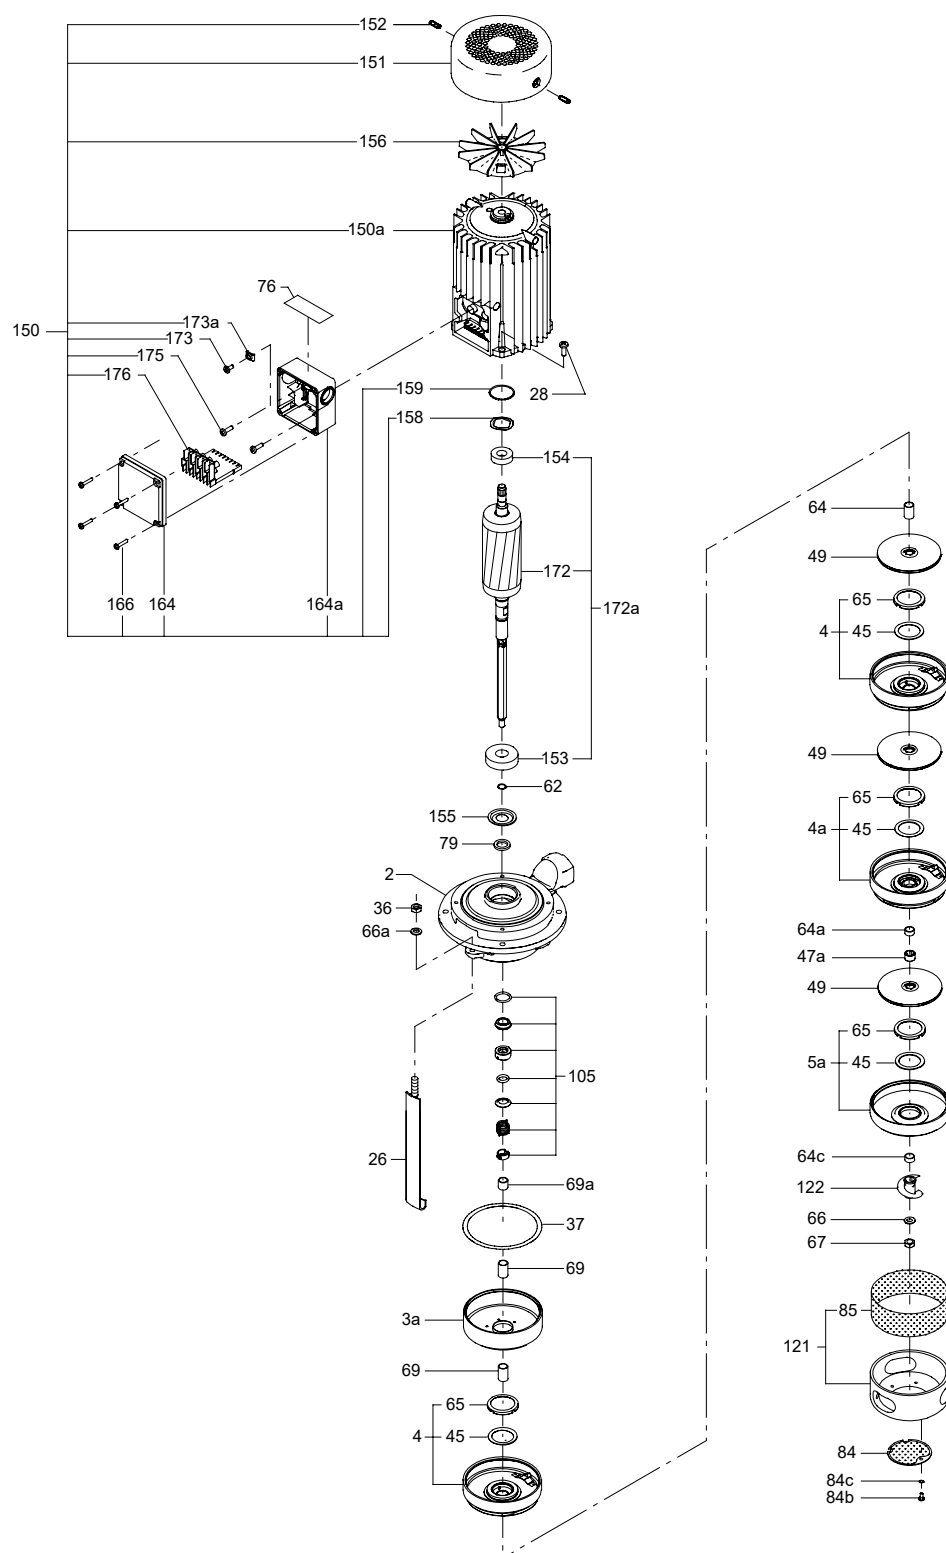

TMM019160

CHK 4

Metal terminal box

Pos.	Models	All
	Kit No	405179
Description		
164a	Terminal box with gasket	1
164	Terminal box cover with gasket	1
166	Screw	4
175	Screw	4
176	Terminal complete	1


Shaft seal

Pos.	Kit No	435031	445068
	Description	CVBV	AUUV
37	Gasket	1	1
62	Stop ring	1	1
105	Shaft seal	1	1

Wear parts

Pos.	Pump type	CHK 4-50/5-1	
		CHK 4-20/2-1	CHK 4-60/6-1
		CHK 4-30/3-1	CHK 4-70/6-1
		CHK 4-40/4-1	CHK 4-80/6-1
	Kit No	445057	445058
Description			
4a	Bearing chamber	-	1
36	Nut	3	3
37	Gasket	1	1
47a	Bearing ring	-	1
62	Stop ring	1	1
66	Washer	1	1
66a	Washer	3	3
67	Lock nut	1	1
69a	Spacing pipe 10 mm	1	1
122	Priming screw	1	1

CHK 4

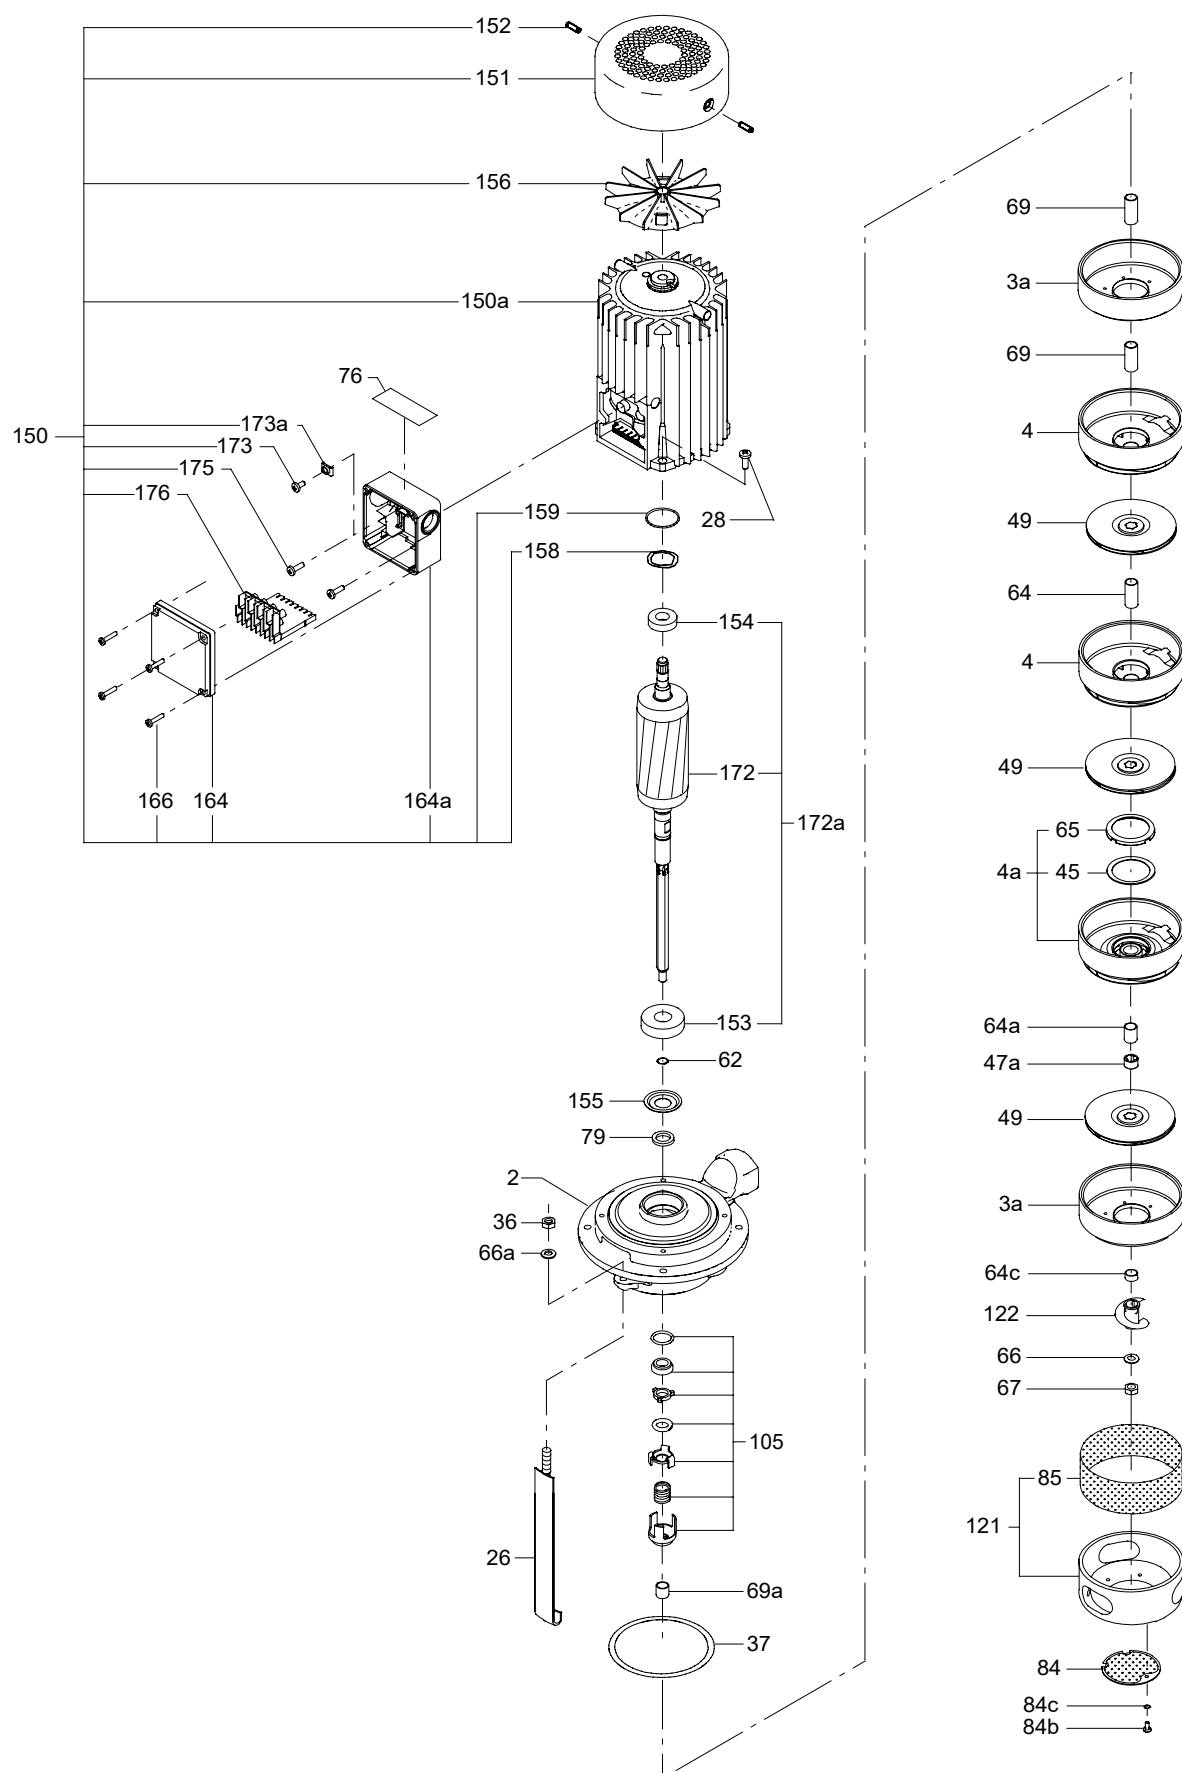

TM019164

CHV 2**50/60 Hz****Shaft seal**

Pos.	Pump type	All models				
	Kit No	985164	985848	985737	985751	96586305
	Description	CVBE/V	AUUE/V	RUUE/V	CVUE/V	AQQE/V
37	Gasket	11	11	11	11	11
62	Stop ring	1	1	1	1	1
67	Lock nut	1	1	1	1	1
105	Shaft seal	1	1	1	1	1

Wear parts

Pos.	Pump type	CHV 2-60	
		CHV 2-40	CHV 2-80
		CHV 2-50	CHV 2-100
	Kit No	435015	435014
	Description		
4a	Chamber	-	1
37	Gasket	6	11
45	Neck ring	5	10
47a	Bearing ring	-	1
64c	Clamp	1	1
65	Neck ring retainer	5	10
67	Lock nut	1	1
79	Diverting disc	1	1
105	Shaft seal	1	1
	Clamp	1	1



CHV 4**50/60 Hz****Chamber stack**

Pos.	Pump type	CHV 4
	Pump stages	4-10
	Kit No	96607936
	Description	
49	Impeller complete	6

Pos.	Pump type	CHV 4
	Pump stages	4-10
	Kit No	96607936
	Description	
4a	Chamber with bearing, polished	1
4	Chamber complete, polished	4


Shaft seal

Pos.	Kit No	985164	985848	985737	985751	96586305
	Description	CVBE/V	AUUE/V	RUUE/V	CVUE/V	AQQE/V
37	Gasket	11	11	11	11	11
62	Stop ring	1	1	1	1	1
67	Lock nut	1	1	1	1	1
105	Shaft seal	1	1	1	1	1

Wear parts

Pos.	Kit No	445067
	Description	
4a	Chamber	1
37	Gasket	11
47a	Bearing ring	1
64c	Clamp	1
67	Lock nut	1
79	Diverting disc	1
105	Shaft seal	1

CHV 4

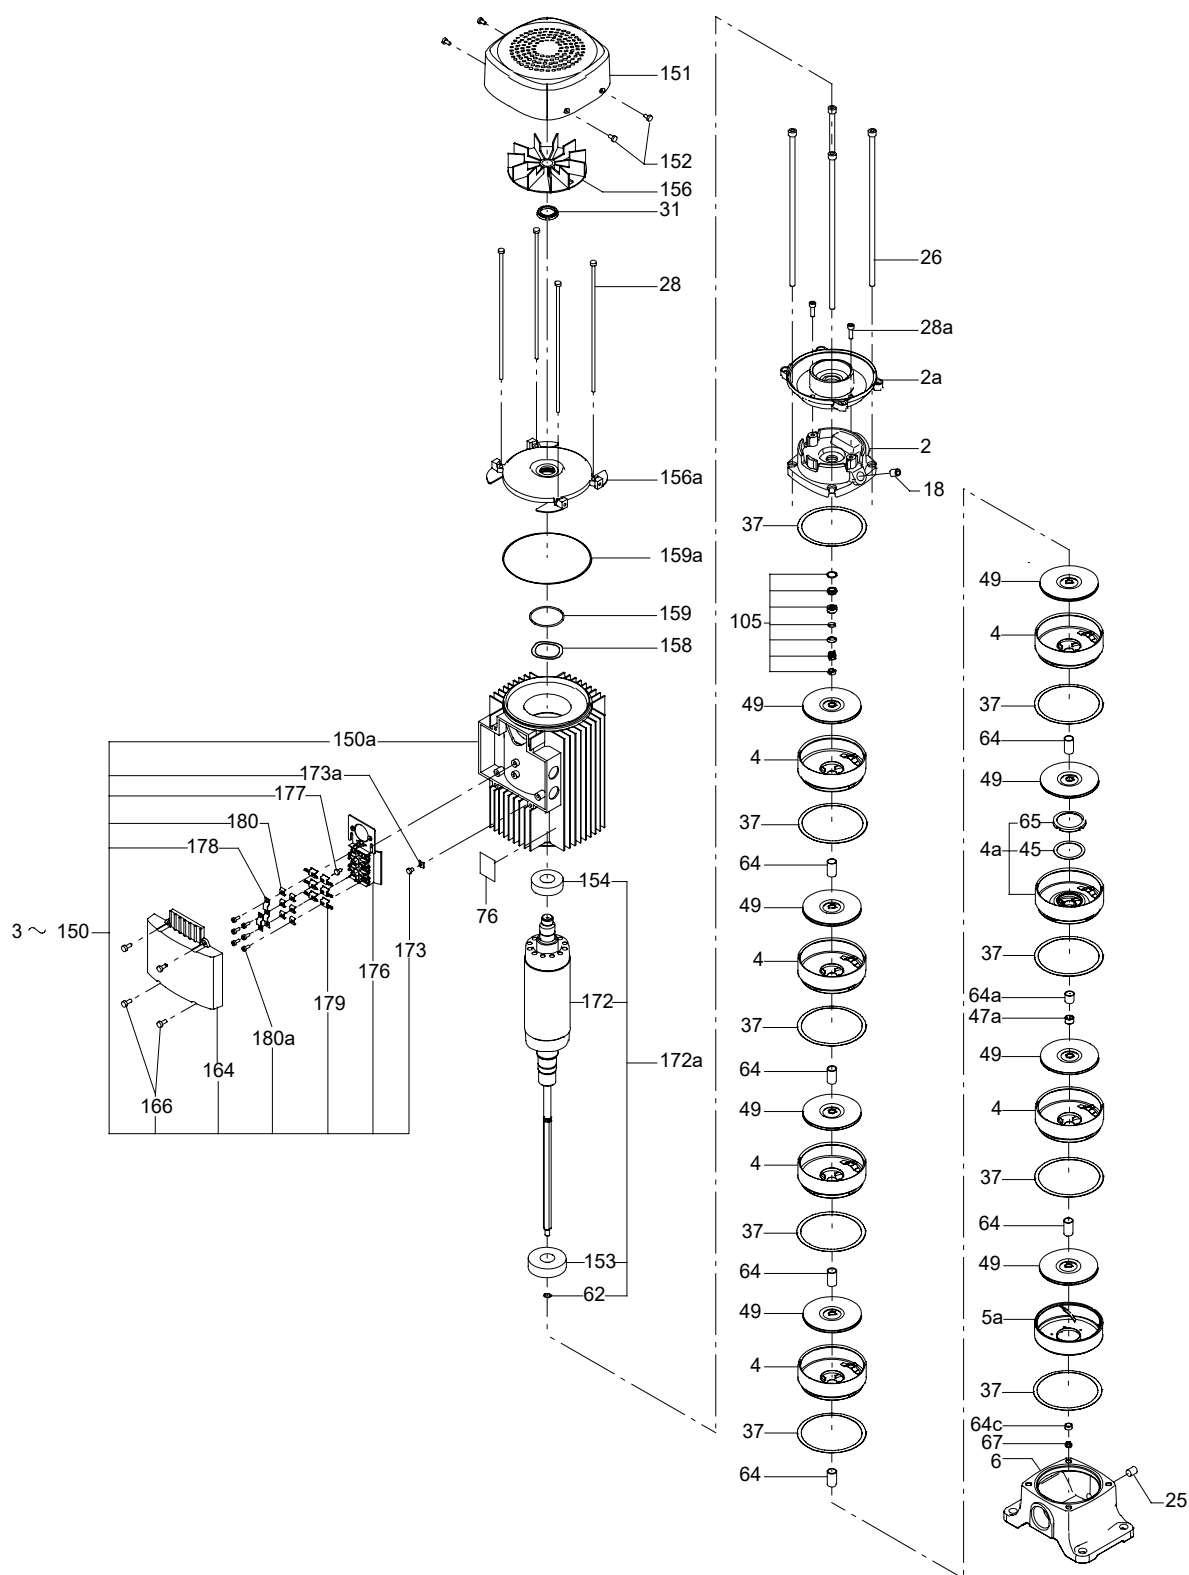

TM017056